
Total Count



The items displayed (or printed) will vary depending on the machine specifications and peripheral devices installed.

Job Count


This displays or prints out the counts of all jobs.

1




Press the [SYSTEM SETTINGS] key.

2

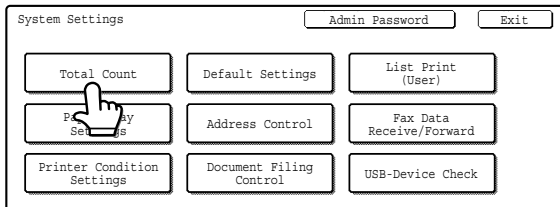

Touch the [Total Count] key.

3

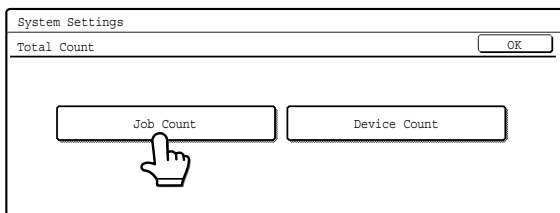

Touch the [Job Count] key.

4

Job Count	B/W	F. Colour	2 Colour	S. Colour
Total Count	12,147,369	36,914,700	39,800	72,568
Copies	3,123,147	21,020,030	39,800	72,568
Prints	3,246,810	15,894,670		
Other Prints	4,680,100			
Fax Receive ...	1,097,312			

Check the job counts.

(1) If necessary, switch through the screens with the keys to display the desired item.

(2) To print the counts, touch the [Print] key.

A message screen appears and printing begins.



- A3 (11" x 17") size paper is counted as two sheets.
- Each sheet of paper used for automatic two-sided copying is counted as two pages (A3 (11" x 17") paper is counted as four pages).
- An entered paper size of 384 mm (5-1/8") or larger is counted as two pages. (Four pages when two-sided copying is used.)
- Pages printed directly from the machine such as list prints are included in the "Other Prints" count.



To cancel printing...

Touch the [Cancel] key in the message screen that appears after you touch the [Print] key.