

When does my Sharp MX need toner?

When you are in copy mode look under the message which says “Ready to scan for copy.”

If the level for any of the toners have dropped to 25%-0% then a message stating which toners are low will appear below the “Ready to scan for copy” message (see Fig.1).

The message will display up to 4 characters, each of which represent one of the toners. Y = Yellow, M = Magenta, C = Cyan and K = Black, from the example shown in Fig.1 the machine is low on yellow and cyan. When this message appears the machine will have approximately 3,500 pages to print depending upon coverage before it runs out of toner.

When the message appears please call our office on (01924) 269 759 and request the relevant toners which will ensure you have the spare on site when the toner runs out.

You can check the toner levels at any time by pressing and holding the COPY button when the machine is in copy mode. The display will show toner levels for all your toners and page counts whilst the COPY button is held down.

(Fig.1)



Ready to scan for copy.
(Y C)

Full Colour
Colour Mode

Job Detail
Settings

1...3...5
Exposure

100%
Copy Ratio

